



- LEGEND**
- AC AUTOMATIC CUTOUT
  - MC MANUAL CUTOUT
  - PDN AIR FLOW SWITCH
  - DS DISCONNECT SWITCH
  - CONTACTOR COIL
  - HEATING ELEMENT
  - TR TRANSFORMER
  - CONTACT NORMALLY OPEN
  - FUSE

**WARNING:**  
Disconnect all supplies before working on this duct heater

**IMPORTANT:**  
Wire in according with electrical codes  
Use copper wire for 90°C minimum

**NOTE:**  
All wiring outside this frame are wiring by others